



RX1250 NTRIP RTK Configuration


- Oprema (obično):
 1. Antenna ATX1230/ATX1230 GG
 2. GEB211 Battery
 3. CF Card
 4. GHT56 Holder
 5. GFU Siemens MC75
 6. GSM Antenna
 7. 90° connector
 8. RX1250
 9. Grip with Circular Bubble
 10. Pole





RX1250 NTRIP RTK Configuration

- Pritisnite **PROG** on RX1250 za uključivanje

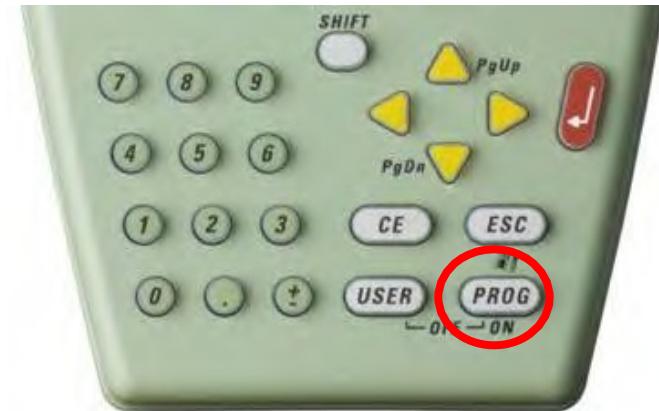

- Izaberite **GPS** sensor
- Pritisnite **F1 CONT**



Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Pritisnite **3 za Manage**
- Pritisnite **5 Configuration Sets**




Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Pritisnite **F2** New Configuration

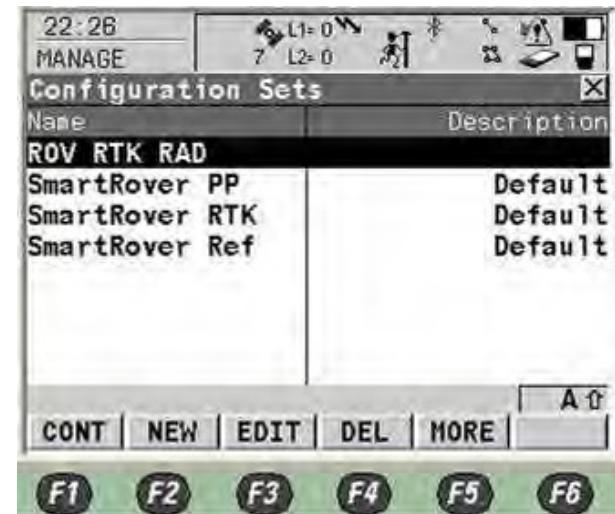

- Ukucajte Configuration Name npr.(BIHPOS)
- Pritisnite **F1** Store




Leica
Geosystems



RX1250 NTRIP RTK Configuration

- Izaberite "View All Screen" za konfiguraciju svih stranica
- Pritisnite F1

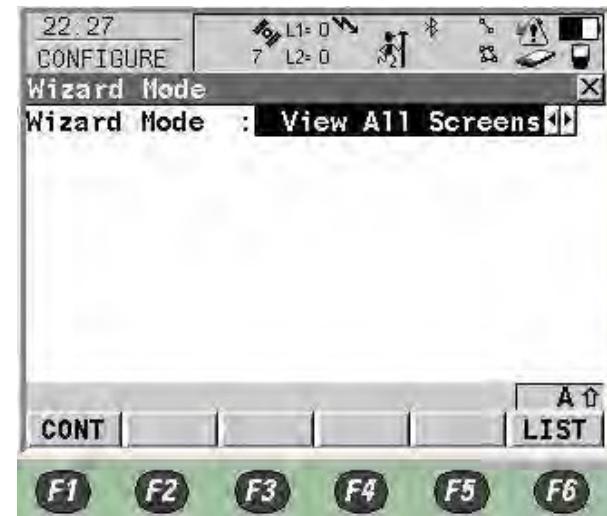

- Izaberite "English" za jezik
- Pritisnite F1




Leica
Geosystems


RX1250 NTRIP RTK Configuration



- Jedinice dužine – Metre (m)
- Decimale jedinice dužine – 3 Decimals
- Uglovne jedinice - $360^{\circ}'''$
- Dec – 1"
- Grade Unit – h:v
- Jedinice brzine – Km/h (kmh)
- Jedinice površine – m²
- Jedinice zapremine – m³
- Jedinice temperature - °C
- Jedinice pritiska – mbar
- Zatim pritisnite F6

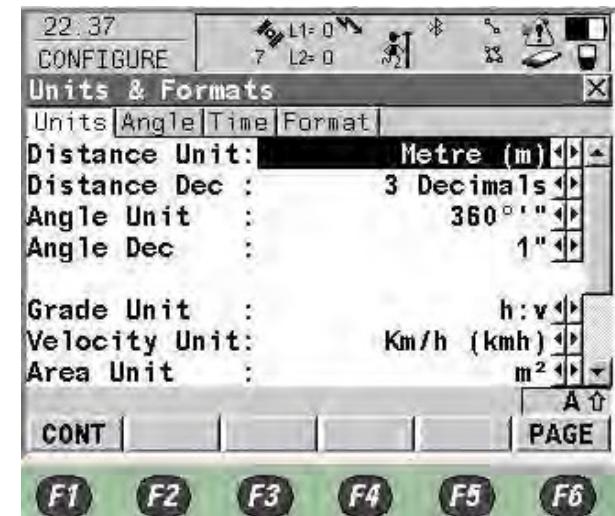

- Namjestite North Azimuth kao referentni smjer
 - South Azimuth – južni smjer
 - North anticlockwise sjever kao referencia ali suprotno od hoda kazaljke na satu
 - Smjer – use NW, NE, SW & SE za smjer
- Namjestite True as the Direction Base
 - Magnetic – namjestite magnetni sjever kao sjever bez ubacivanja deklinacije
- Pritisnite F6

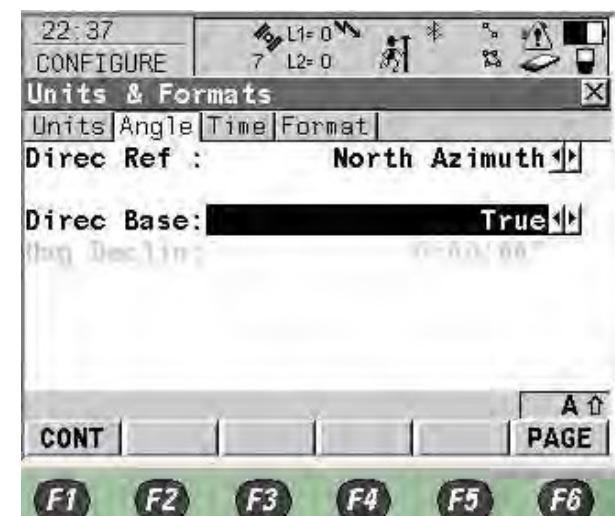

Leica
Geosystems


RX1250 NTRIP RTK Configuration



- Namjestite **24 hour** kao format vremena
- Namjestite **Day.Month.Year** kao format datuma
- Pritisnite **F6**



- Namjestite **East, North** kao format mreže
- Namjestite **Lat, Long** kao Geodetski format
- Pritisnite **F1**

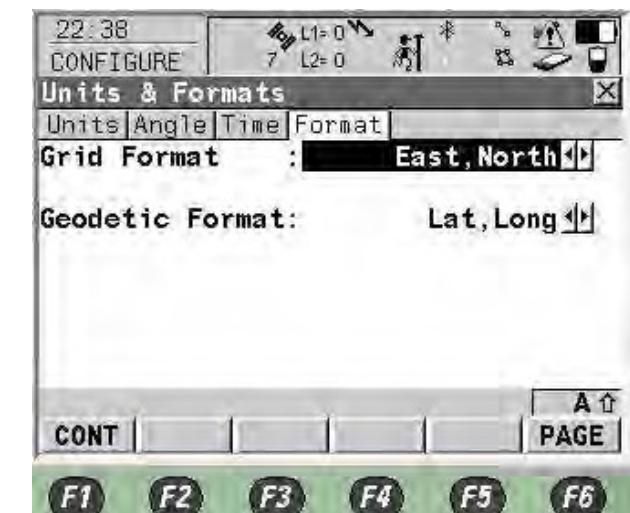

Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Namjestite **None** u R-Time modu
- Pritisnite **F1**
- Kasnije de se ponovo postaviti



- Izaberite antenu **ATX1230 Pole/ATX1230 GG pole** kada se koristi štap
- Unesite visinu **2.000m**
- Izaberite
- Visina antene pri kretanju **2.000m** pri auto pohranjivanju tačaka
- Pritisnite **F1**




Leica
Geosystems



RX1250 NTRIP Single RTK Configuration


- Definišite izgled displeya za survey **Mask 1**
- Pritisnite **F3** za definisanje

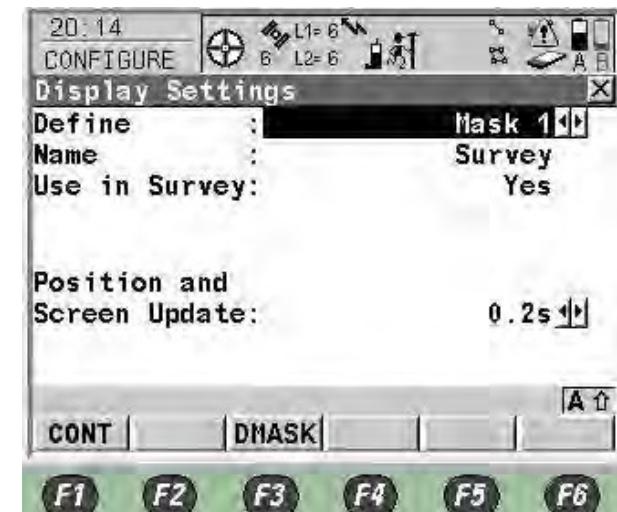

- Izaberite informacije koje Vas zanimaju, pritisnite **Enter** na liniji za selekciju
- Postavka npr.: Lines

	1
1 st Line	Point ID
2 nd Line	Line Space Full
3 rd Line	Antenna Ht
4 th Line	RTK Positions
5 th Line	GDOP
6 th Line	Quality 2D
7 th Line	Quality 3D

- Pritisnite **F1** za nazad

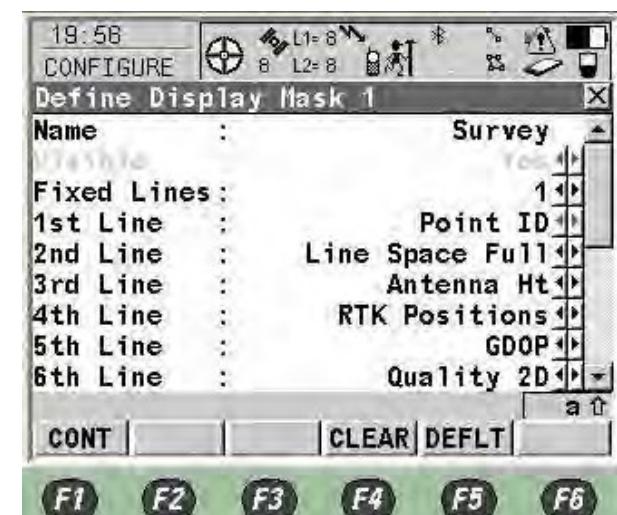


Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Najbrži update pozicije i ekran je is **0.2s**
koristedi Bluetooth ATX1230
 - Koristedi kabl to vrijeme je 0.05s
- Pritisnite **F1**

- Quick code je način brze pohrane
 - **Never** – nije dostupno
 - **On** – aktivirano
 - **Off** – dostupno ali nije aktivno
- Digits – broj cifara za quick code
- Attributes – druge informacije o kodu – **Default Values**
- Thematic codes je lista kodova
 - **With Codelist** - ukoliko imate i zelite selektovati listu
 - **Without Codelist** – lista nije dostupna, manuelni unos
- Pritisnite **F1**

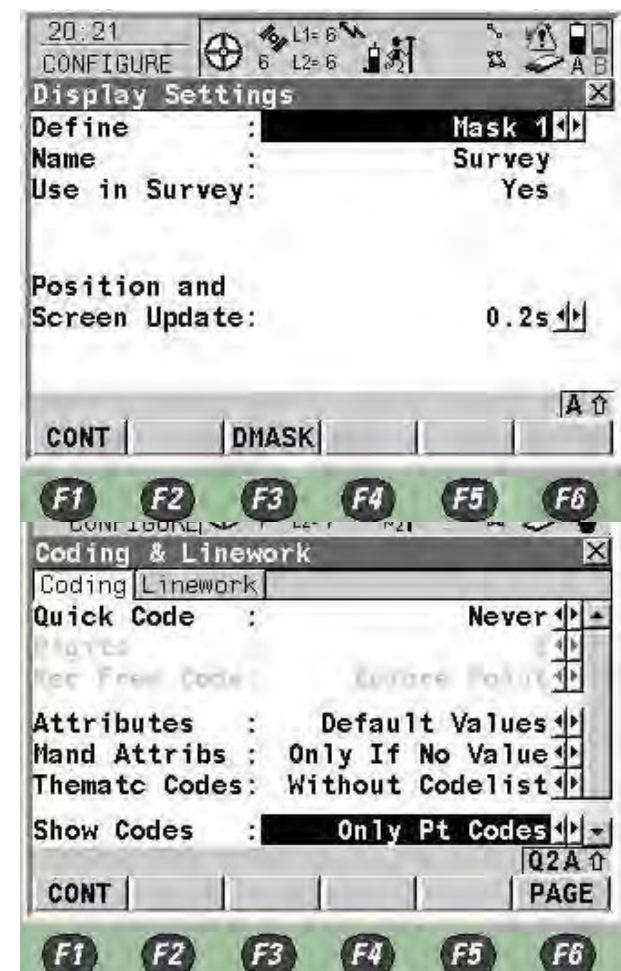

Leica
Geosystems


RX1250 NTRIP RTK Configuration



- Log Raw Obs je pohrana sirovih podataka opažanja
 - Never – nema sirovih podataka
 - Static – sirovi podaci statičkih opažanja
 - Static & Moving – kinematsko opažanje, pohrana podataka
- Log rate – 0.2s koristedi bluetooth, obično se stavi **1.0s/5.0s** ako morate pohranjivati podatke za post procesing
- Pritisnite **F1**



- Okupacija tačke
 - Normal – Tačka se procjenjuje po svakoj epohi logovanja
 - Instantaneous – interpolacijom epoha
- Auto okupacija I Auto stajanje **No** – Manuelni izabir okupacije I stajanja
- time, position, accuracy, parameters se podešavaju pritiskom na **F3**
- Beep on stop – **Yes**
- Auto store – **Yes**
- Beep on store – **Yes**
- End Survey - **Manual**
- Pritisnite **F1**

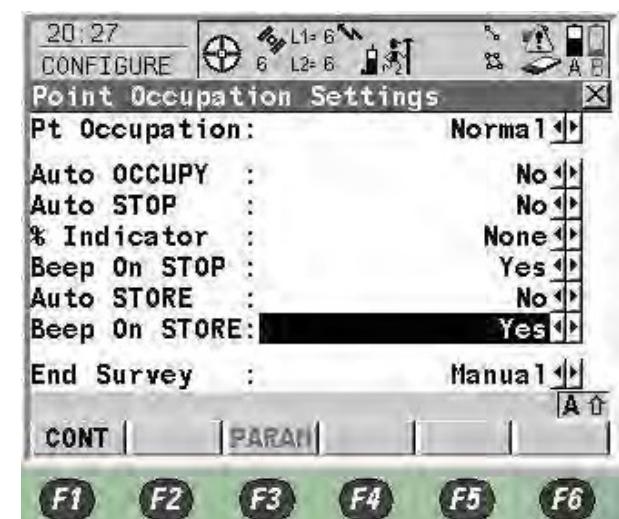

Leica
Geosystems

RX1250 NTRIP RTK Configuration



- CQ control je provjera kvaliteta koordinata prije pohrane
 - **None** – bez provjere
 - Position Only – Horizontalna 2D provjera
 - Height Only – Verticalna 1D provjera
 - Position and Height – 3D provjera
- Maximum CQ – ako pređe vrijednost – pojavit će se upozorenje
- DOP Limit set as **None** (GDOP, PDOP, HDOP & VDOP)
- Maximum DOP – ako je van granica GPS pozicioniranje nede biti dostupno
- Allow 2D Position
 - **Yes** – GPS de raditi sa 3 satelita dostupna
 - No – GPS de biti nedostupan sa 3 dostupna satelita
- Pritisnite **F1**



RX1250 NTRIP RTK Configuration



- ID Templates je predhodno definirani template broja tačke
- Pritisnite **Enter** ako želite promjenu
- Pritisnite **F1**



- Izaberite **No** za pohranu seizmičkih podataka
- Pritisnite **F1**




Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Označite kunkicu za svaki Hot Key
- Pritisnite Enter

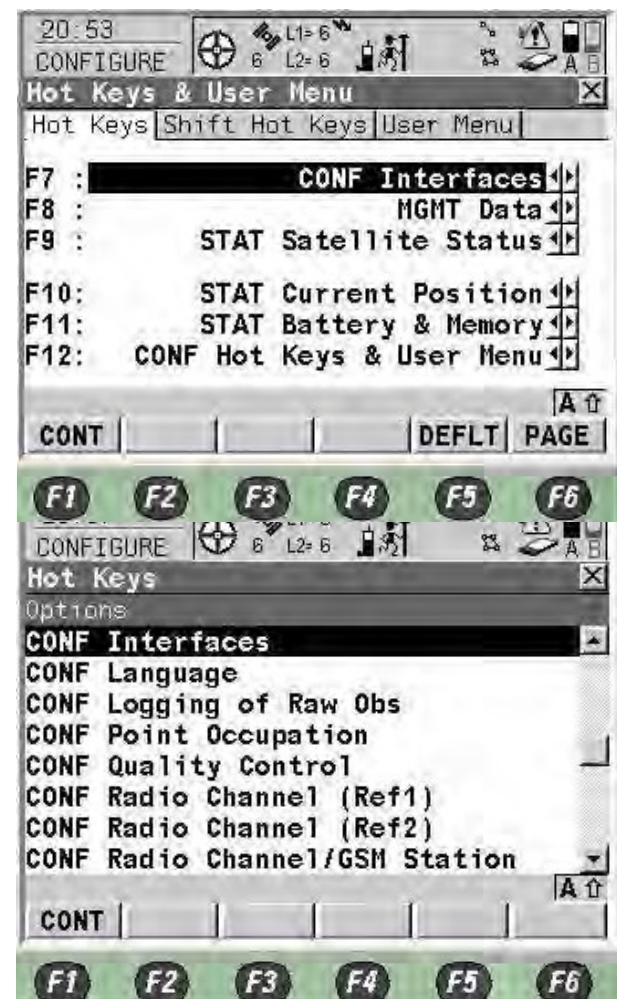

- Izaberite svoje opcije
- Ili ukucajte funkciju koju poznajete
- Pritisnite F1

Leica
Geosystems



RX1250 NTRIP RTK Configuration

- Pritisnite **F6** za podešavanje Shift Hot Keys



- Uradite iste korake kao kod podešavanja Hot Keys
- Pritisnite **F6** za podešavanje korisničkog menija





RX1250 NTRIP RTK Configuration

- Uradite iste korake kao kod podešavanja Hot Keys
- Pritisnite **F1**



- Podesite postavke display-a
 - Touch screen – **On**
 - Screen Beep – **Loud**
 - Screen Illum – **Off**, On for Night Time
 - Key Illum – **Off**, On for Night Time
 - Contrast – **50%**
 - Heating – **Off**, On for Very Cold Time
- Ukoliko touch screen nije tačan pritisnite F5 za kalibraciju
- Pritisnite **F6**



Leica

RX1250 NTRIP RTK Configuration



- Podesite zvuke upozorenja
 - Off – nema zvuka na upozorenju
 - Soft – mali zvuk na upozorenju
 - Loud – visok zvuk na upozorenju
 - Zvuk tipki
 - Off – nema zvuka na upozorenju
 - Soft – mali zvuk na upozorenju
 - Loud – visok zvuk na upozorenju
 - Pritisnite F6
-
- Namjestite default izbore slova αNum ili F1-F6
 - Pritisnite F1



Leica
Geosystems



RX1250 NTRIP RTK Configuration

- Namjestite Start-Up Screen kao
 - Main Menu –6 Ikona Main Menu
 - Survey – the Survey Menu (1-step set-up)
 - Other programs
- Pritisnite F6



- Koristite PIN pri startanju
 - Yes – Maksimum 6 brojeva
 - No – Bez passworda
- Pritisnite F1



Leica
Geosystems



RX1250 NTRIP RTK Configuration

- Satelitski system koji se koristi
 - GPS samo
 - GPS & GLONASS
- L2C tracking – **Automatic** je preporučeno
- Cut-Off angle – elevacijski ugao **-10°**
- Loss of Lock – **Beep & Message**
- SV Health je pohrana kvaliteta signala sa satelita
 - **Automatic** – Praden na prijemniku, koji su satelitski signali nezdravi, nede biti korišteni za RTK računanja
 - User Defined – Ručno isključivanje neželjenih podataka
- Suppress MPath – **Automatic** je preporučeno kao način ublaživanja multipatha
- Pritisnite **F1**




leica
Geosystems

RX1250 NTRIP RTK Configuration



- Sarajevo je **+2:00** za Time Zone (UTC)
- Pritisnite **F1**

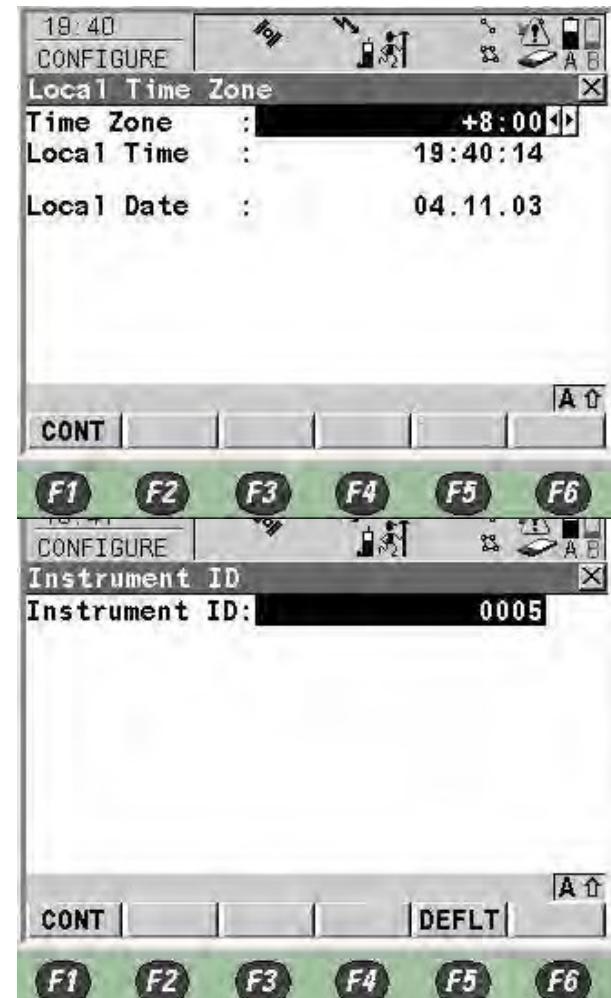


- Namjestite ID vašeg instrumenta sa 4 slova
- Pritisnite **F1** za završetak konfiguracije

Leica
Geosystems

RX1250 NTRIP Single RTK Configuration



- Sada napravite konekciju bluetooth i real-time interface-a, Pritisnite **5** ili selektujte **5 Config** i pritisnite **Enter**
- Izaberite **4 Interfaces** i pritisnite **Enter**

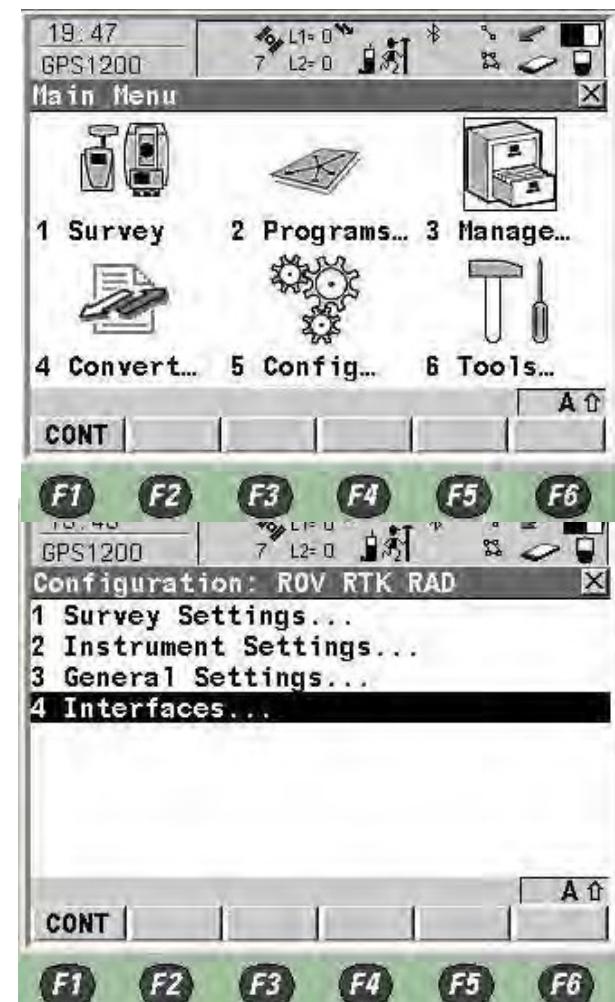


Leica
Geosystems

RX1250 NTRIP RTK Configuration



- U SmartAntenna Interface, Pritisnite F3

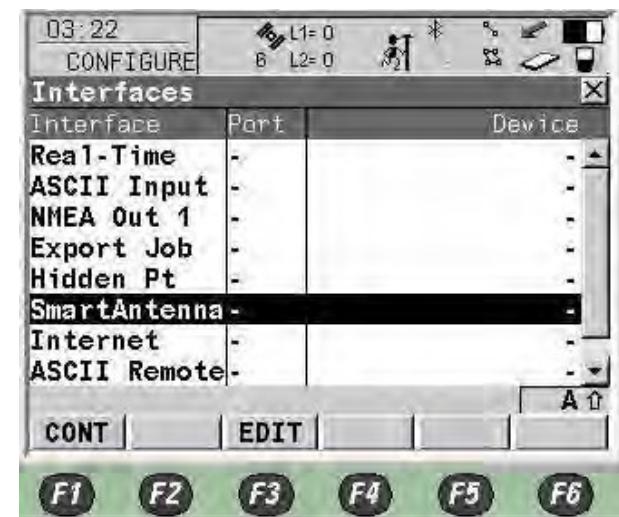

- Namjestite Use Device kao Yes
- Port as Bluetooth 1
- Device as ATX1230 / ATX1230 GG
- Pritisnite F3 SRCH za pretragu ID adrese Smartantenna
- Pritisnite F1



Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Sada izaberite Internet, pritisnite F3
- Namjestite Internet kao Yes




Leica
Geosystems

RX1250 NTRIP Single RTK Configuration



- Izaberite **Clip-on** when the GFU plug-in the GHT56
 - Port 1 – port kontrolera
 - Bluetooth – koristi bluetooth
- Pritisnite **F5**
- Select **MC45/MC75** odnosno prema tipu Vašeg uređaja
- Pritisnite **F1**

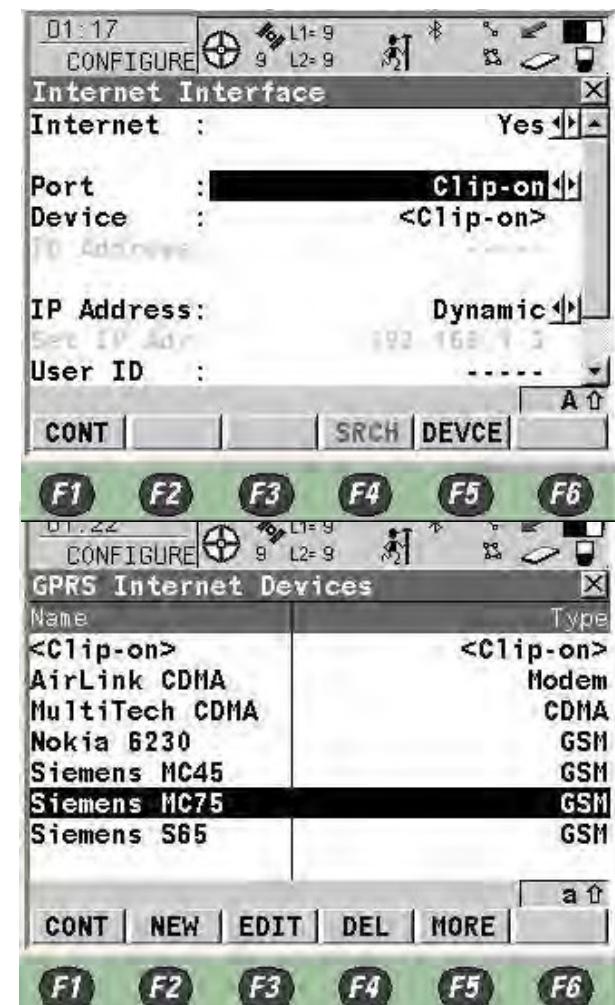


Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Ako koristite bluetooth, pritisnite F4 za pretragu Bluetooth uređaja
- Pritisnite F1

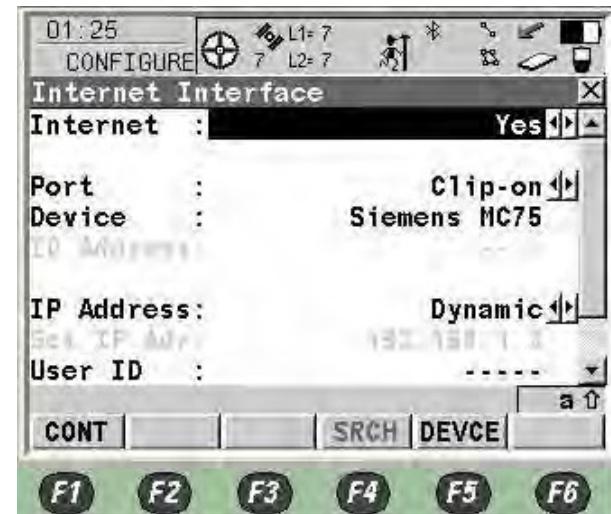

- Na Internet interface-u, pritisnite F4



Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Ubacite APN internet access number vašeg provajdera
- Press F1

™ Ako uspješno obavite "Connect to internet" poruka de se pojaviti kao i simbol "@"

- Izaberite Real-Time interface, pritisnite

F3

01:28 CONFIGURE L1=7 7 L2=7 @

GPRS/Internet Connection

Device : Manufact ModelId

APN : internet

(cont) : -----

Connect to internet

CONT CODES

F1 F2 F3 F4 F5 F6

01:30 CONFIGURE L1=7 7 L2=7

Interfaces


Interface	Port	Device
Real-Time	-	-
ASCII Input	-	-
NMEA Out 1	-	-
Export Job	-	-
Hidden Pt	-	-
SmartAntennaBT 1	-	<Bluetooth 1>
Internet Clip	-	Siemens MC75
ASCII Remote	-	-

CONT EDIT

F1 F2 F3 F4 F5 F6

RX1250 NTRIP RTK Configuration

- Namjestite R-Time Mode kao Rover

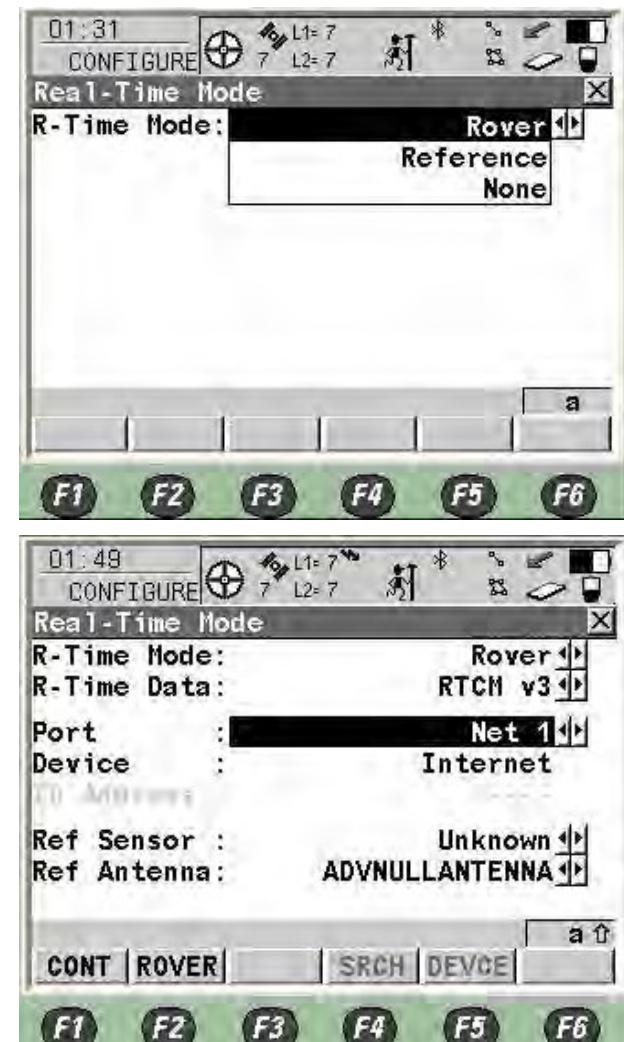

- Namjestite R-Time Data kao **RTCM v3 v3.1** za RTK
- Namjestite Port kao **Net1**
- Namjestite Ref Sensor kao **Unknown**
- Namjestite Ref Antenna kao **AdvNullAntenna**
- Pritisnite **F2** Rover



Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Namjestite **Any Received** kao Accept Reference
- Namjestite **None** as Ref Network RTK
- Pritisnite **F4**



RX1250 NTRIP RTK Configuration



- Namjestite **Automatic** kao sending GGA Position
- Pritisnite **F1**



- Pritisnite **F6** za NTRIP stranicu




Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Namjestite Yes za Use NTRIP
- Unesite FBiHPOS username i FBiHPOS password
- Sada u monutpoint unesite bilo šta
- Pritisnite F1
- Pritisnite F1


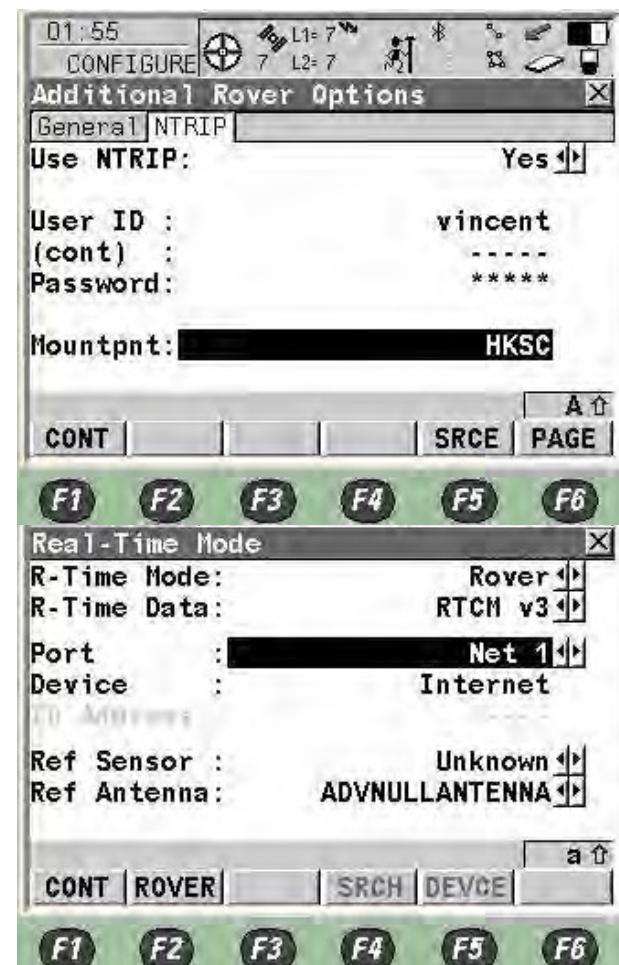


Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Na Real-Time interface-u, pritisnite F4
- Namjestite User kao Client
- Na Server, press Enter

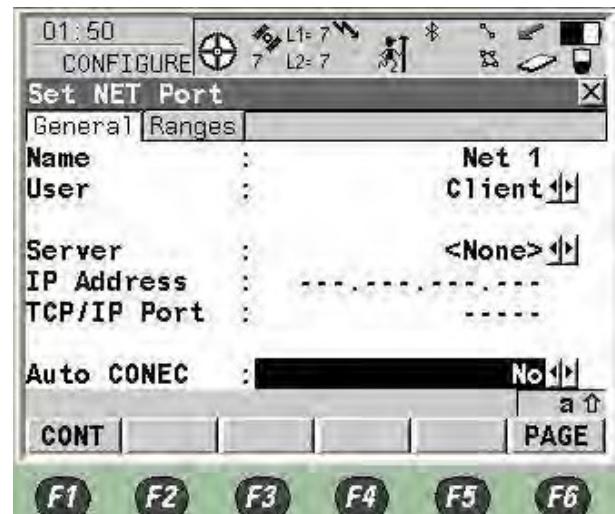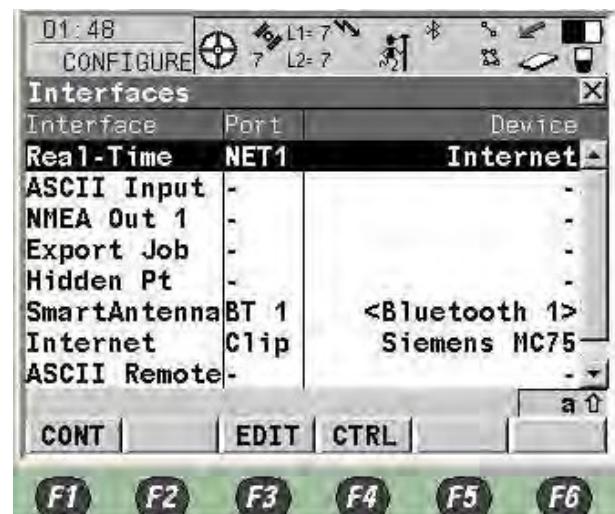


Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Pritisnite **F2 New server**
- Unestite **Name** za server
- Unesite IP Address kao **fbihpos.katastar.ba** za BIHPOS server
- Unesite TCP/IP Port as **8080**
- Pritisnite **F1**

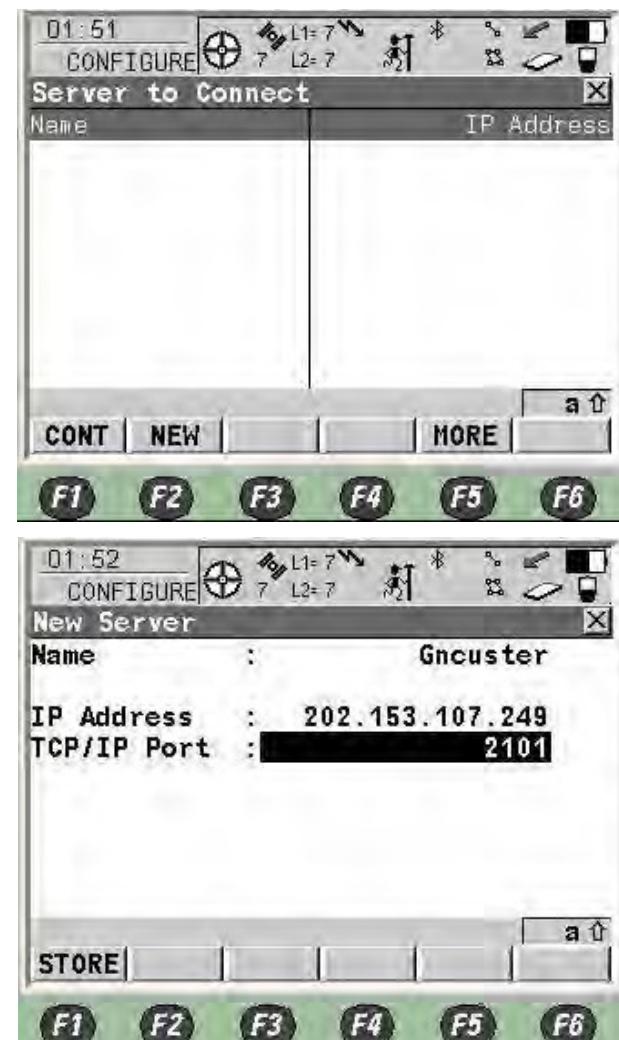

Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Pritisnite F1
- Namjestite auto Connect kao No – Manual Connect
- Pritisnite F1

Name	IP Address
Gncuster	202.153.107.249

Name	:	Net 1
User	:	Client
Server	:	Gncuster
IP Address	:	202.153.107.249
TCP/IP Port	:	2101
Auto CONEC	:	No

Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Sada pritisnite F3 za promjenu monuntpoint ponovo



- Pritisnite F2 Rover




Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Pritisnite **F6** za NTRIP stranicu
- Pritisnite **F5** za pretragu mountpointa

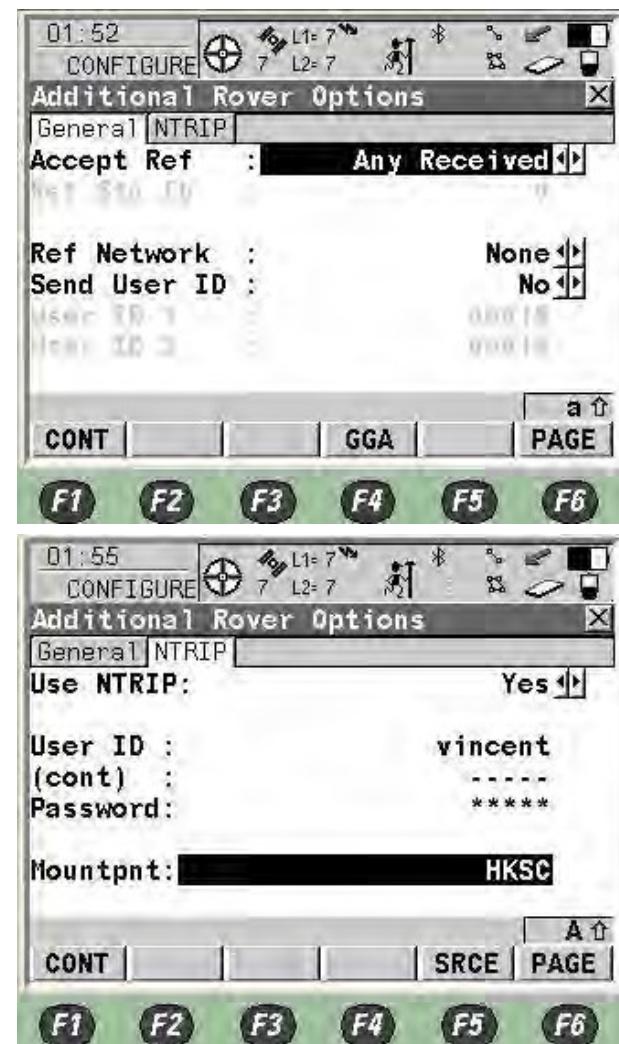

Leica
Geosystems

RX1250 NTRIP RTK Configuration




- Pritisnite F1
- Pritisnite F1

Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Pritisnite F1
- Završite NTRIP konfiguraciju

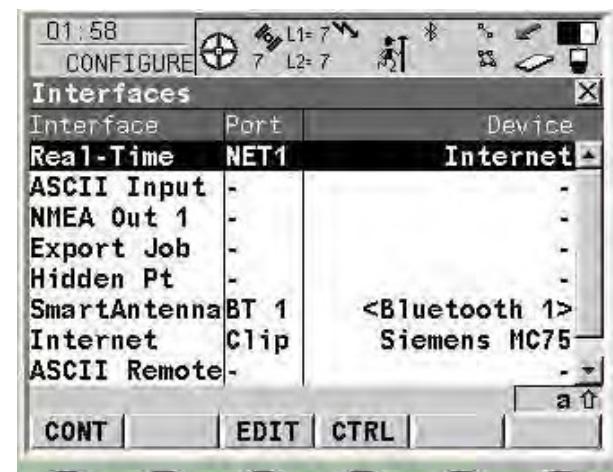

Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Pritisnite **1** ili izaberite **Survey** i pritisnite **F1**
- Izaberite posao i pritisnite **Enter**




Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Pritisnite **F2** za novi posao
- Ili izaberite postoјedi posao i pritisnite **F1**

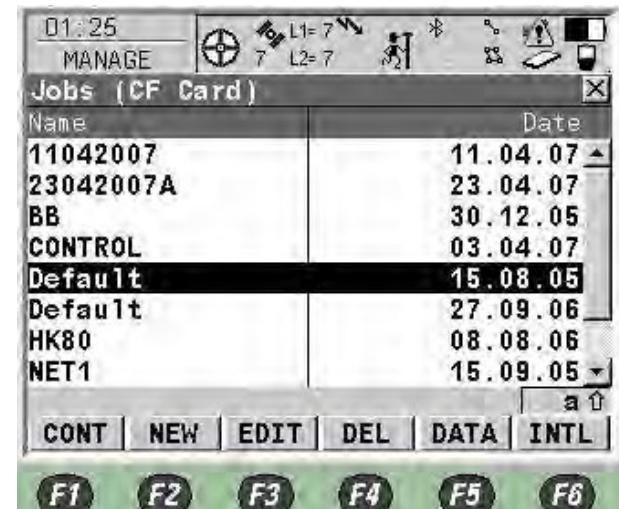

- Ubacite **Job Name**
- Pritisnite **F6** za listu kodova



RX1250 NTRIP RTK Configuration



- Press **Enter** to Select your codelist
- Select the one you need and press **F1**

01:29
MANAGE
L1= 7 L2= 7 *
New Job
General Codelist Coord System Avge
Codelist : <None>

01:31
MANAGE
L1= 7 L2= 7 *
CodeLists
Name Date
<None> -----
HK 06.02.04
Highways 28.02.07

Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Pritisnite **F6** za stranicu koordinata



Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Izaberite i pritisnite F1
- Pritisnite F6 za Average stranicu

Coordinate Systems

Name	Type
HENRY	Onestep
HENRY2	Classic 3D
ITRF96-HK80	Classic 3D
Local-project2	Twostep
MACAU	Classic 3D
School1	Twostep
TEST	Classic 3D
TTT	Onestep

New Job

General	Codelist	Coord System	Avge
Coord System : ITRF96-HK80			
Residuals	:	No Distribution	
Transform	:	ITRF96-7P	
Ellipsoid	:	HAYFORD	
Projection	:	HK80	
Geoid Model	:	<None>	
CSCS Model	:	<None>	

RX1250 NTRIP RTK Configuration



- Namjestite Average Mode kao **Average** – izračunavanje srednje pozicije tačaka sa istim imenom
- Namjestite Points to Use as **TPS & GPS** – koristite obje opažane tačke
- Ograničenje prosječne pozicije i visine namjestiti npr. **0.050m & 0.075m** kada pozicija prelazi ove granice pojavit će se upozorenje
- Pritisnite **F1**

01:39
MANAGE
New Job
General Codelist Coord System Avge
Averaging Mode: Average
Points to Use : TPS & GPS
Avge Limit Pos: 0.050 m
Avge Limit Ht : 0.075 m

STORE PAGE

02:27
MANAGE
Jobs (CF Card)
Name Date
11042007 11.04.07 ▲
23042007A 23.04.07
BB 30.12.05
CONTROL 03.04.07
Default 15.08.05
Default 27.09.06
HK80 08.08.06
Leica 24.04.07 ▼

CONT NEW EDIT DEL DATA INTL


F1 F2 F3 F4 F5 F6

Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Izaberite NTRIP konfiguraciju
- Izaberite odgovarajudu antenu
- Pritisnite **F1**


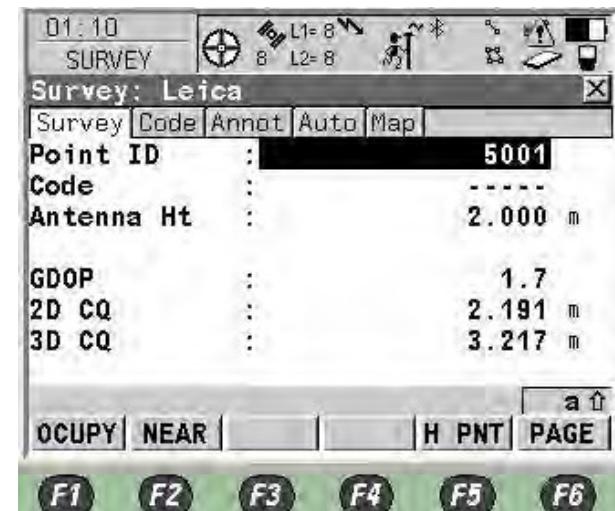


Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Pritisnite **F3 Connect**
- Poslije primanje korekcije signala
Signal tačnost de se povedati,
a i pojaviti de se označe, kako je pokazano
na slici desno
- Sada, možete zauzeti tačku i pritisnuti
F1 Occupy

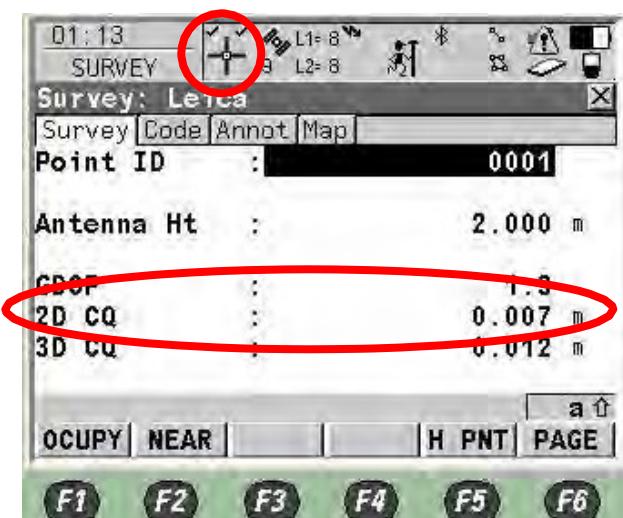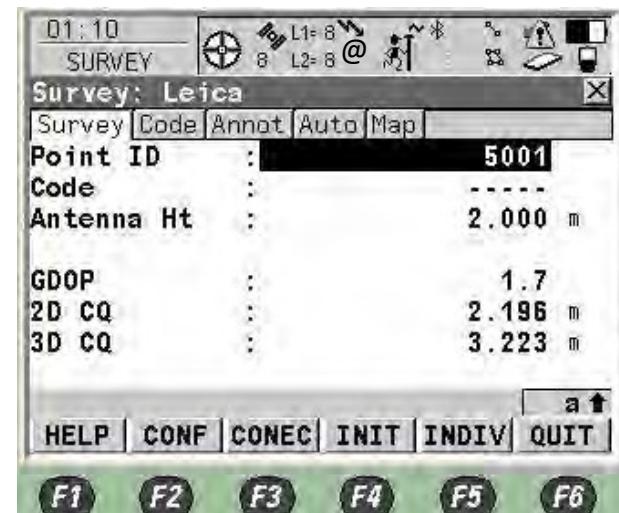

Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Pritisnite **F1 Stop**
 - Pohranjena vrijednost de biti procijenjena vrijednost srednjih RTK pozicija
 - Onda de se automatski pohraniti i "**Point XXXX has been stored**" de se pojaviti na display-u
-
- Pritisnite **F1** za zauzimanje sljedeće tačke
 - Ako ste završili mjerjenje prekinite komunikaciju i pritisnite **SHIFT**

01.20 SURVEY

Survey: Leica

Point ID : 0001

Antenna Ht : 2.000 m
RTK Positions: 4
GDOP : 2.0
2D CQ : 0.010 m
3D CQ : 0.017 m

STOP NEAR H PNT PAGE

F1 F2 F3 F4 F5 F6

Survey: Leica

Point ID : 0002

Antenna Ht : 2.000 m
GDOP : 2.2
2D CQ : 0.007 m
3D CQ : 0.013 m

Point 0001 has been stored

OCUPY NEAR H PNT PAGE


F1 F2 F3 F4 F5 F6

Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Pritisnite **F3** Disconnect
- Pritisnite **SHIFT** ponovo za odustajanje

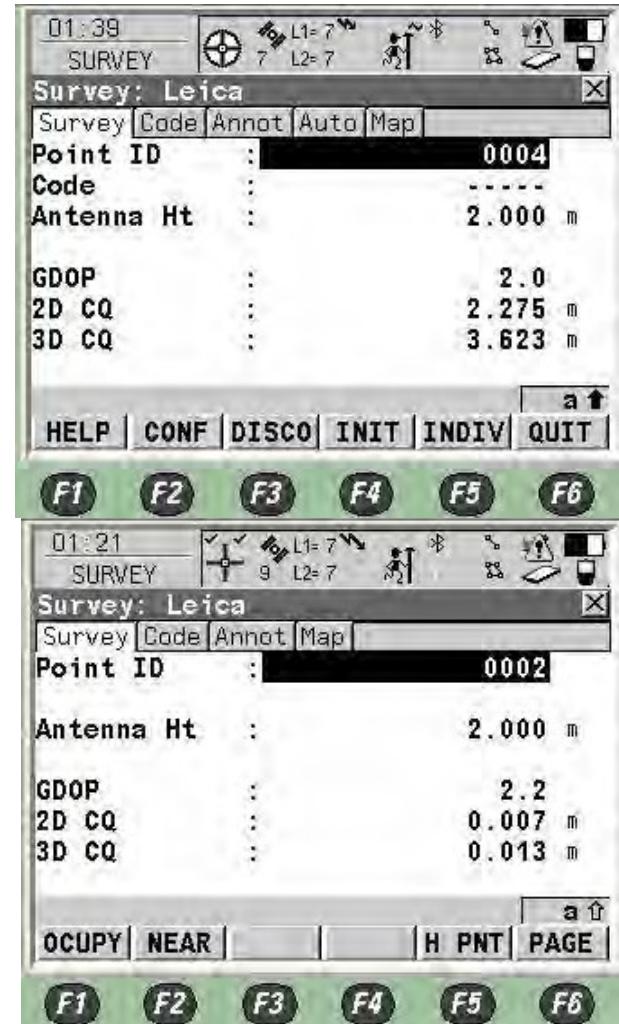


Leica
Geosystems

RX1250 NTRIP RTK Configuration



- Pritisnite **F6** za odustajanje
- Onda se mora ugasiti u glavnome meniju

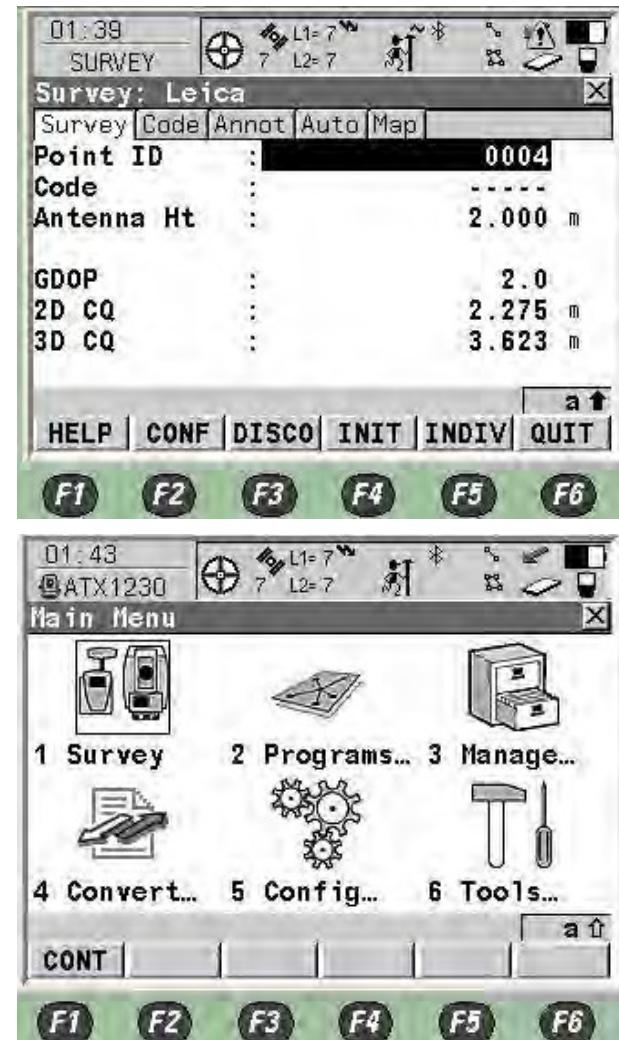

Leica
Geosystems

RX1250 NTRIP Single RTK Configuration

- Pritisnite **USER** i **PROG** tipke zajedno za gašenje

